

HDC UPGRADE GUIDE

Upgrade tool:

Ethernet cable,

Files:

Upgraded files(FW) :

XXX_XXXX_XXX-xxx-xxx_Vx.xx.xx.bin (There may be multiple bin files in the folder, all of which are files that need to be upgraded.)


1. Connect the product and PC with upgrade tool.Product connection power supply.



2.Change the IP address of the PC to 192.168.0.xxx, ensuring that the product and PC have the same network segment. For example, if the product's IP is 192.168.0.100, the PC's IP can be changed to 192.168.0.12.





3. Open the PC browser, enter the product's IP address in the website bar, for example 192.168.0.100, and enter the login interface.

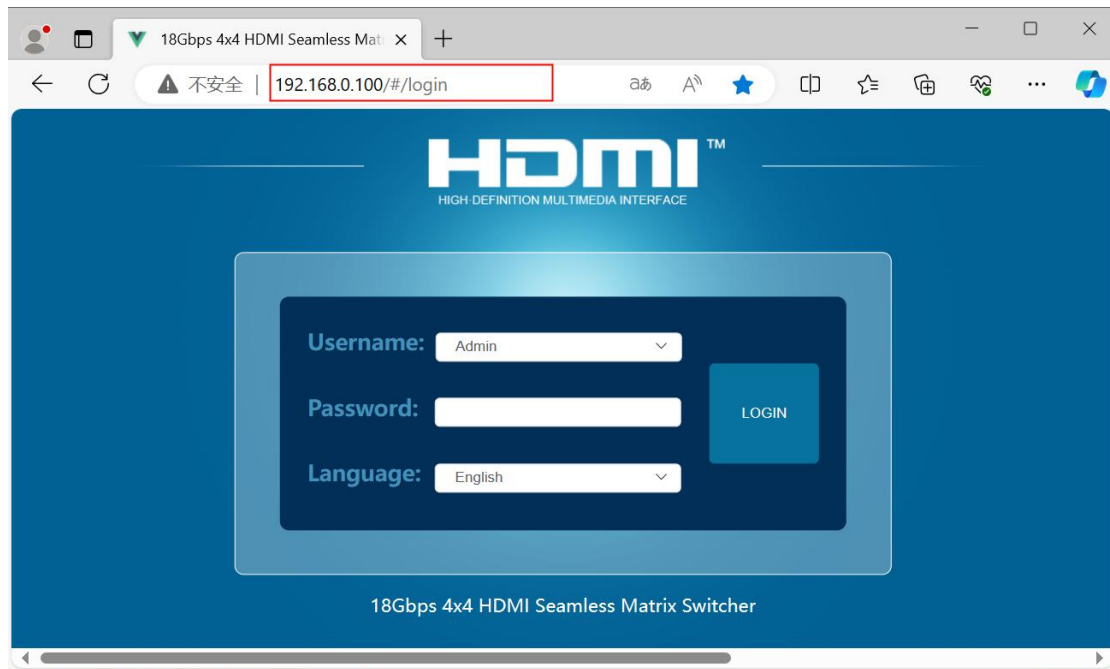

4. Select the Username and enter the Password. Then click the "LOGIN" button and the following Status page will appear. The default password is:

Username: Admin / User
Password: admin / user

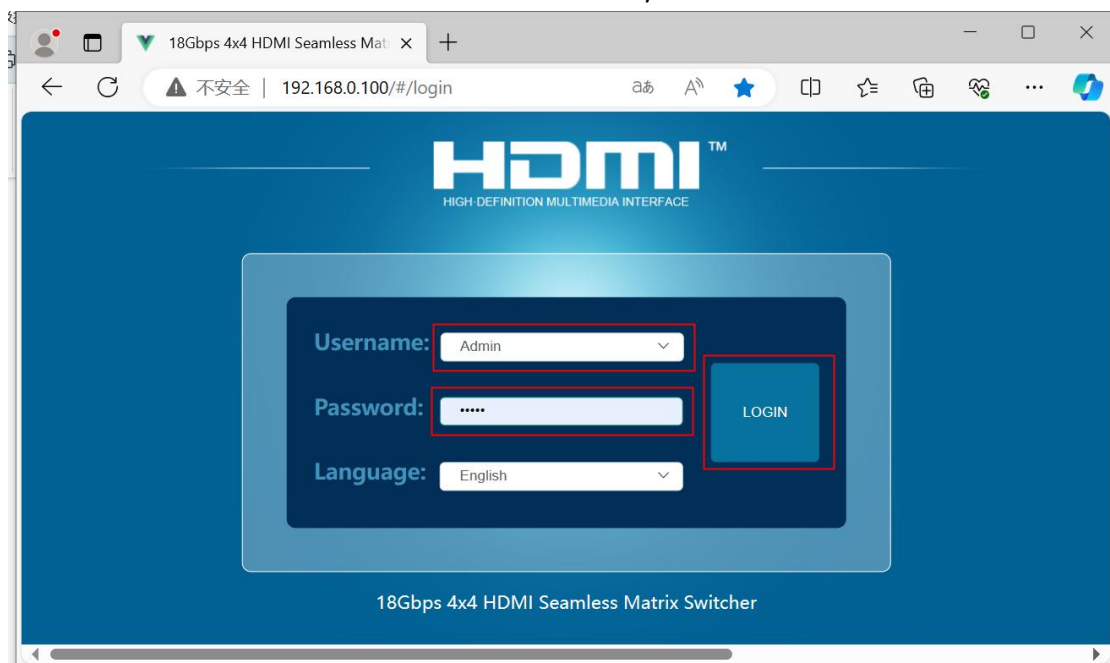

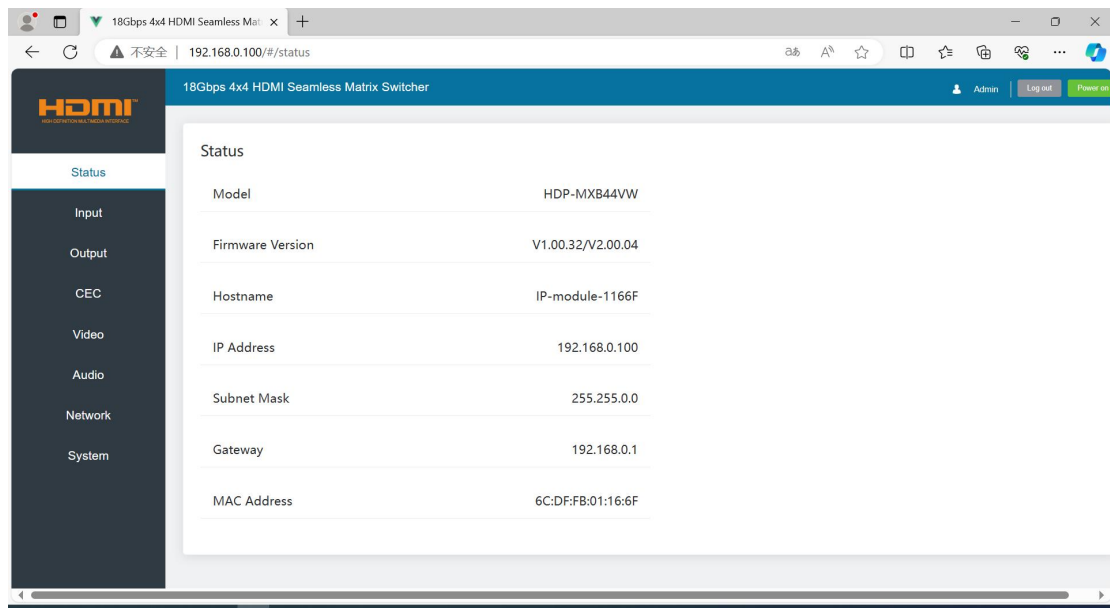

5. Switch to the system page and select software upgrade. After the upgrade is completed, it will automatically jump to the login page.

